
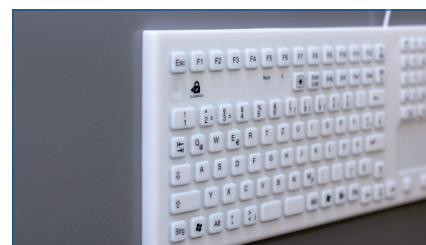


InduProof® Pro TKG-107-TOUCH-IP68-WHITE-MAG-BACKL

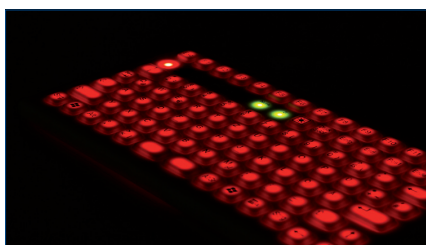

PRODUCT FEATURES:

- Keyboard with silicone enclosure
- Completely waterproof and dustproof
- Can be fully disinfected and cleaned
- Integrated touchpad
- Four stages of back-lighting
- Magnetic mountings to attach the unit to magnetic surfaces in a flexible way
- Locking key to prevent any incorrect commands being triggered

TECHNICAL DATA

Number of keys: 107
Switch technology: carbon contacts on gold
Shift force: 1.5 N
Shift path: 1.3 mm
Service life: each key can be used approx. 1 million times

Protection class: IP68
Enclosure material: silicone
Enclosure colour: white
Interface: USB
Power supply: 100 mA

Cable length: 2 m
Weight: ca. 913 g
Operating temperature: 0 °C bis + 70 °C
Storage temperature: -30 °C bis + 70 °C
Dimensions: 377 x 157 x 15 mm


TECHNICAL DATA FOR TOUCHPAD

Operating principle: capacitive
Dimensions: 60 x 42 mm

Documentation: CE declaration, IP test, guarantee certificate, EMC test

Cat. no.	Product description	Keyboard layout
KG21254	TKG-107-TOUCH-IP68-WHITE-MAG-BACKL-USB-DE	DE
KG22203	TKG-107-TOUCH-IP68-WHITE-MAG-BACKL-USB-US/EU	US/EU

Other layouts, configurations and interfaces are available on request

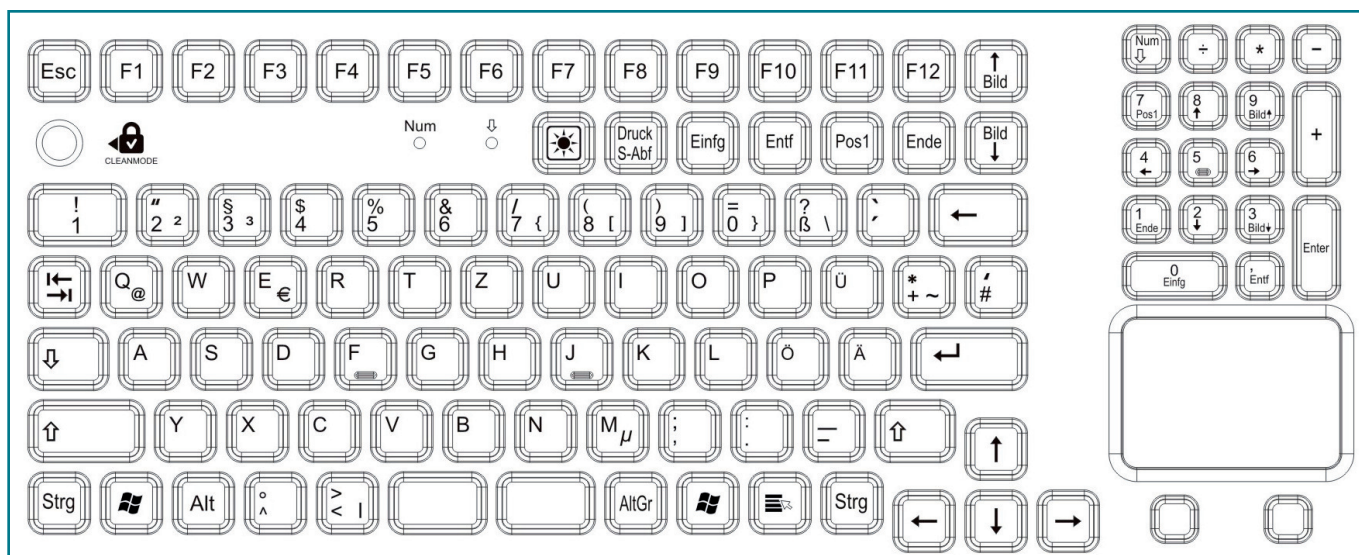

1. KEY FUNCTIONS:

Touchpad-tapping*: + + **F2** > Activates and deactivates the tapping function

Lighting levels: > > > > > OFF

Key lock: > Press and hold for 2 seconds

2. SPECIAL FUNCTIONS:

Magnetic mounting: Keyboard sticks to almost any magnetic surface up to an angle of 90° by means of a magnetic mounting.

Lighting: Keyboard has 4 lighting stages that can be controlled via the key.

Clean mode: To activate or deactivate the clean mode, hold this key down for 2 seconds. This deactivates the key function and the touchpad. You can then clean the keyboard without triggering any incorrect commands.

***Touchpad-tapping:** Touchpad tapping allows you to use different functions by typing the touchpad surface once or several times (e.g. in word processing: single tap to position the cursor, double tap to select paragraphs)

You can find operating instructions and hints on cleaning and disinfecting at:

www.gett-group-service.com